


INSTALLATION GUIDELINES

The NRV is supplied to meet code in select states, when not applicable for meeting the regional code requirement it should not be used.


When necessary, place the NRV on the outlet side of the pump, leaving a minimum distance of 8" between pump outlet and the NRV.

DIRECTION OF FLOW THROUGH THE NRV:

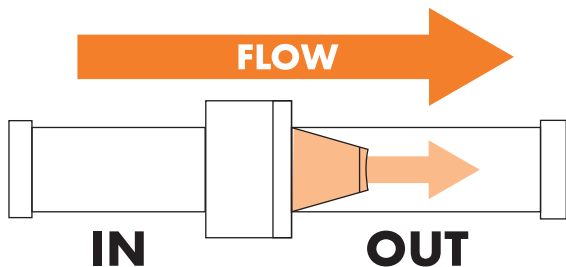


When opting to use the NRV additional filtration to avoid debris and contamination entering the NRV should be considered, duty cycle, usage, and environmental conditions will determine the filtration required. Our guidance is to mount the filter in-line between pump outlet and inlet to the NRV. The ID of the filter should not be less than the NRV's.

*** Filter not supplied**

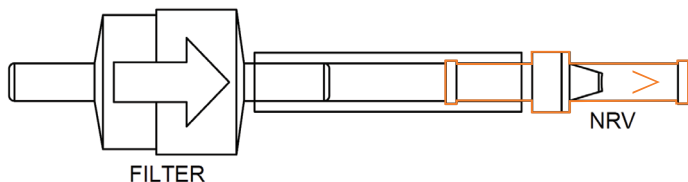

NON-RETURN VALVE (NRV)

BLUEDIAMOND
CONDENSATE REMOVAL PUMPS

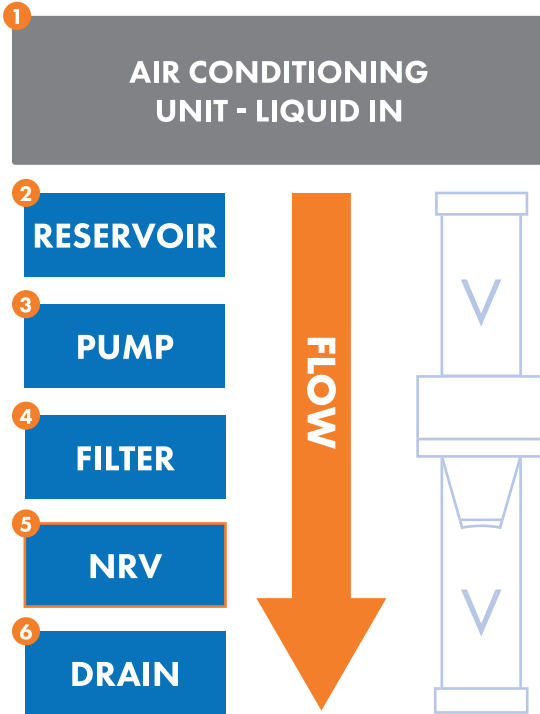

CONTACT US

 info@bluediamondpumps.com

 www.bluediamondpump.us

